





—

.....	5
.....	5
.....	6
.....	8
.....	9
.....	11

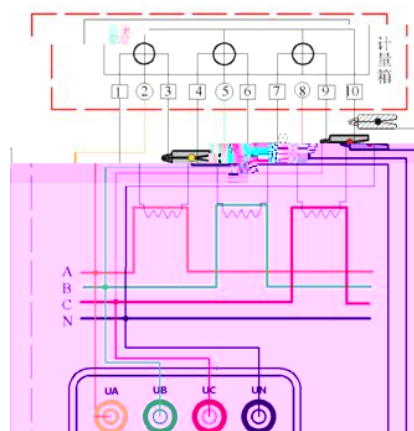

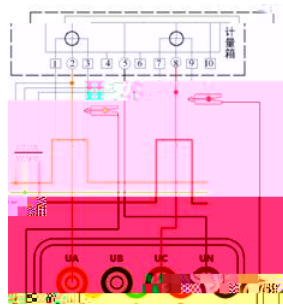

基本设置

接线方式：

三相四线

额定电压(V)：

角度参考：

A相

角度正方向：

顺时针

接线判断

功角：

27.0°

误差：

5°

备注

测量人：

测量单位：

备注：

确定

取消

